



Sanitaire SC684 brush roller replacement or cleaning

Written By: Caycie Pascual



PARTS:

- [Disturbulator Assembly Complete Part # 53270](#) (1)

Sanitaire SC684


Step 1 — Belt



⚠ Be sure to unplug the vacuum cleaner before disassembling to prevent electric shock.

- Lay vacuum on its back

Step 2

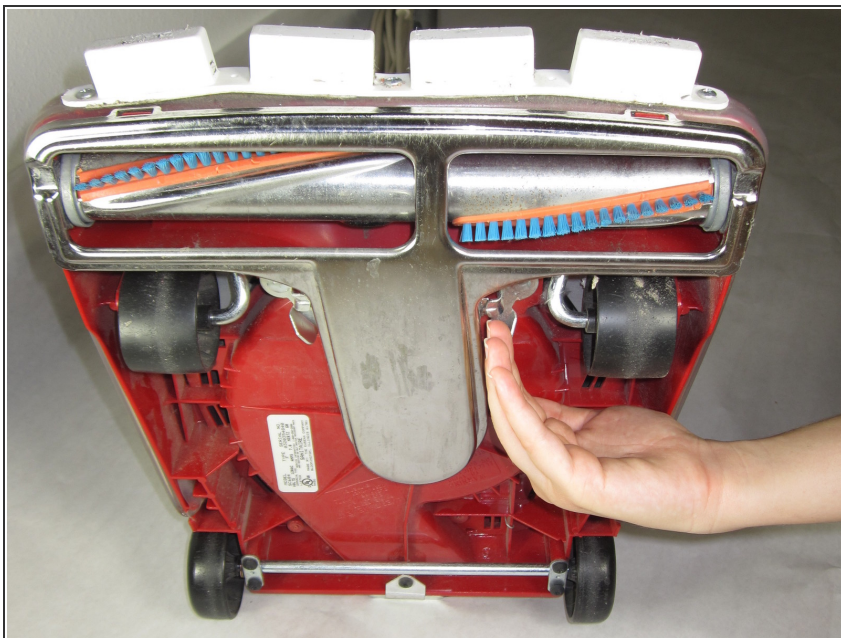


- Find the bottom metal plate and identify the two latches on either side of the vacuum.
- Detach the two latches on either side of the vacuum by pulling outwards towards the wheels.

Step 3




- Lift off the metal plate by pulling it towards you.

Step 4

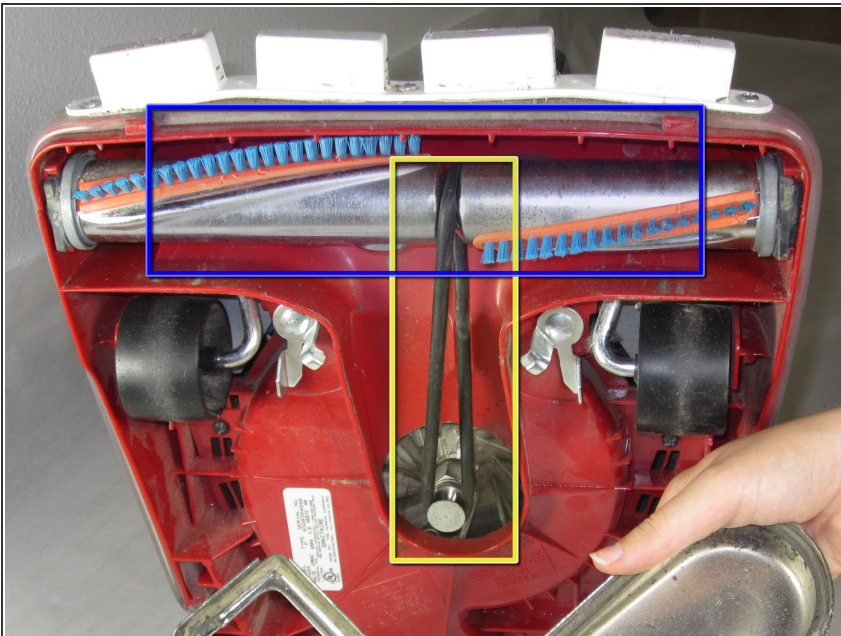



- Identify the belt and brush roller.
- The belt is a black circle made of rubber.
- The brush roller has bristles and is tube shaped.

Step 5

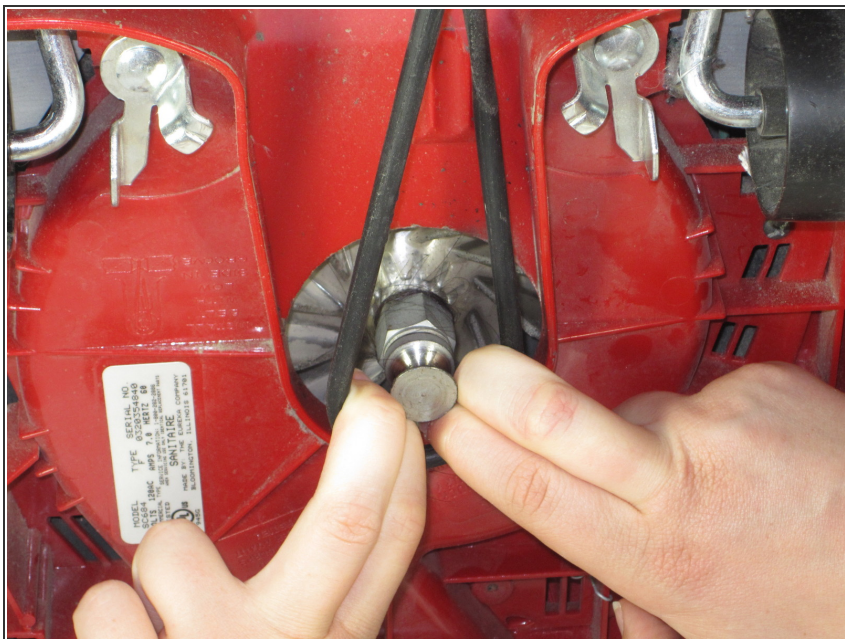

- Slide the belt off of the circular knob.

Step 6

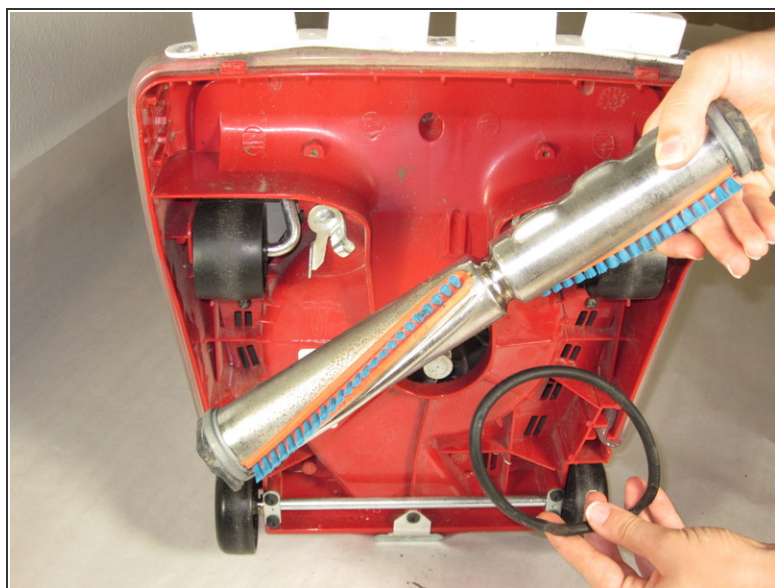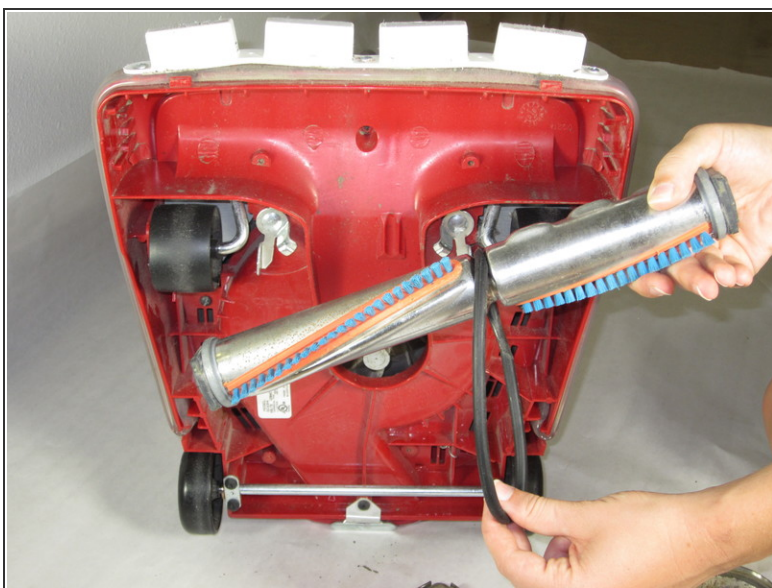

- Pull brush roller out and detach the belt off the brush roller.

To reassemble your device, follow these instructions in reverse order.

